

CCDS1415-PM Pendant Fixture Solaris Dome.

Pendant Fixture

The bracket is supplied in two parts.


The bracket is supplied with a 1.2m pole.

Cut the unthreaded end of the pole to the desired length.

Slide the pole into the top of the mounting flange until level with the top face of the flange. Spot drill the pole through the holes in the mounting flange. Remove the pole and drill through both sides of the pole with a 9mm drill.

Re-insert the pole and secure using two M8 x 65 long screws provided. Fasten the mounting flange to the mounting substrate using the three holes shown.

Note: Ensure the chosen fasteners and fastening method are suitable for the application and the mounting substrate. For CCTV installations only.

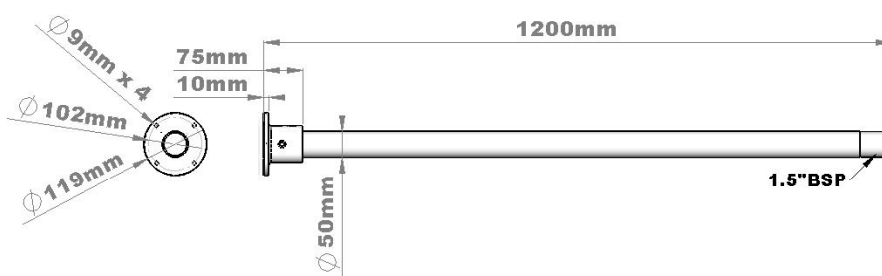

The SOLARIS dome should be installed by competent, qualified personnel in accordance with the latest national standards.

Bracket: Aluminium: Alloy

Screws, nuts etc: Stainless steel

Colour: White



MOLYNX Systems.

9 - 10 Wernddu Court,
Caerphilly Business Park,
Caerphilly
CF83 3ED
Tel: 02921 660 234